

Replenish Paper Receipt Roll - Astreo

Select Maintenance Functions.

Select **Maintenance of ImI5 printer** (this is the paper receipt printer)

Select **Reload Paper**

Select Support RECEIPT (RECEIPT)

The Opal Top Up & Single Trip Ticket machine will display the **Support RECEIPT** (RECEIPT) IML5 screen


Now it's time to access the IML5 (paper receipt) printer
Lock display back into place


Press lever at bottom right of paper receipt printer towards you and lift down

The paper receipt roll is now able to be removed

Remove the empty spindle and remove the empty paper receipt roll from it
Lift up and remove empty spindle reel from printer and remove empty roll

ALL CONTROL OF CONTROL

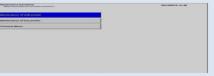

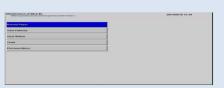











Replenish Paper Receipt Roll - Astreo

Unpack new paper receipt roll and tear off the first layer or so to ensure that there is no glue or sticky residue on the paper.

Insert spindle into new paper receipt roll

Ensure the replacement receipt roll end is facing forward and feeding from the top

Slide the paper receipt roll into the slot

Raise printer module back up as far as it goes and press lever towards you to lock into place

Feed the paper into the printer guider as far as possible

You should see the paper appear in the small cutout window bottom right

Go to the main menu and select **Paper Guiding**

Then select **New Roll.** The paper will automatically be pulled down into the printer

The display will briefly show "Printing test ticket"

Collect and check test paper receipt

Display refreshes "Reload done. Test ticket printed. Press enter to validate Select Previous Menu twice to return to main menu, select Sales without Reboot, then select YES







14

15

16